


Boot Seal Kit fitting instructions

Mark boot lid with tape at corner for alignment

DO NOT STRETCH EXTRUSION WHEN GLUEING TO LID

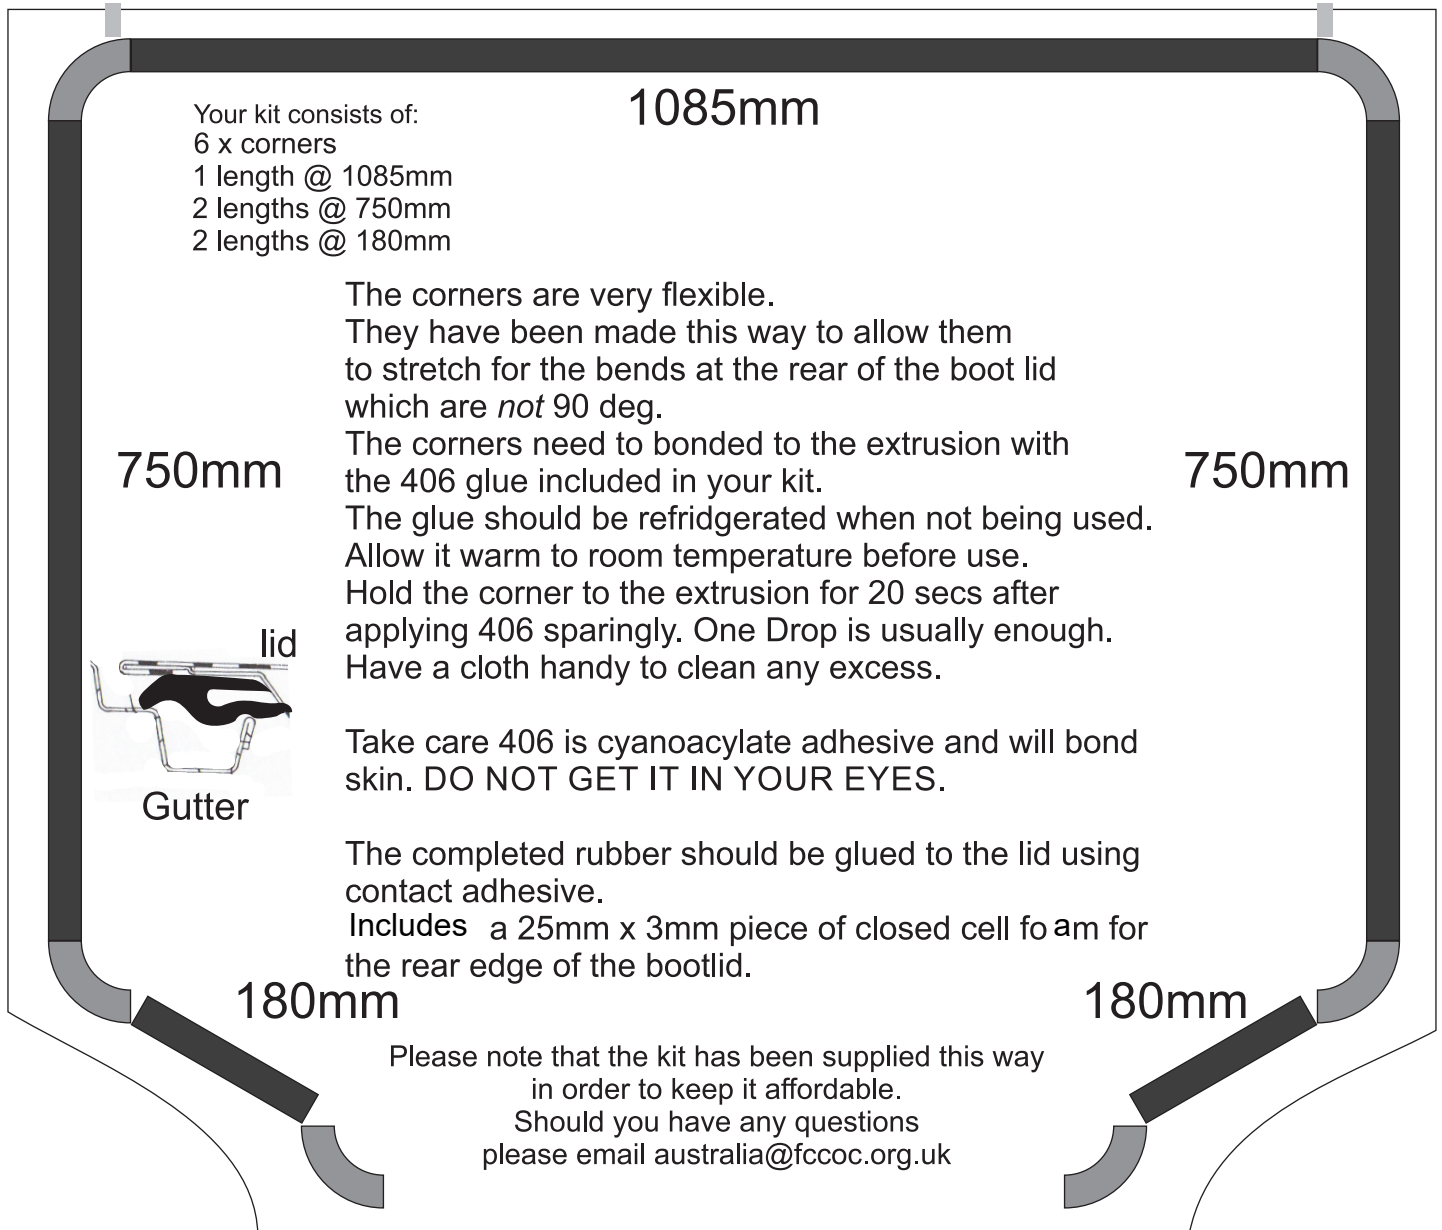

A MSDS can be downloaded from <https://www.facebook.com/groups/CCapriandclassicsww/>
Although this MSDS is for Loctite 406 the adhesive supplied should be treated in the same way.